


# QuickGuide

## Progressive distributor

### Step 1:

Remove the transport pin

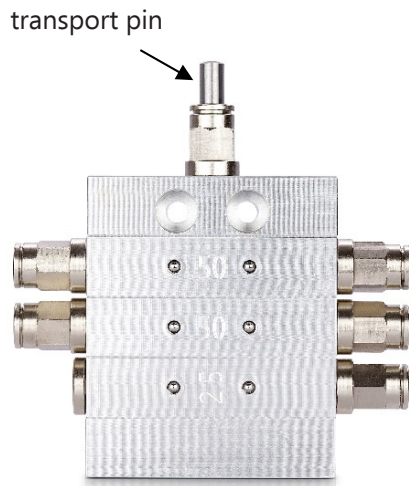

Pull the transport pin out of the inlet.

The progressive metering device is flushed, vented and checked at the factory with a „white oil“.

If necessary, the progressive distributor can be filled with the working grease before commissioning.

### Step 2:

Fill the distributor




The distributor is approved up to a maximum pressure of 100 bar. DLS Lubricating Systems recommends „flushing“ the distributor with a DLS pump.

**ATTENTION:**  
**Please do not use a hand grease gun! The guarantee expires!**

### Step 3:

Assembly of the progressive distributor

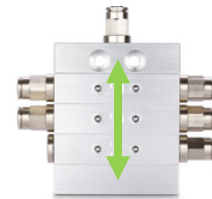

Direction of movement of the distributor in the application okay



Direction of movement of the distributor in the application okay



Direction of movement of the distributor in the application is **NOT** okay